


EMProbe

Setup Guide

V0.9 17042020

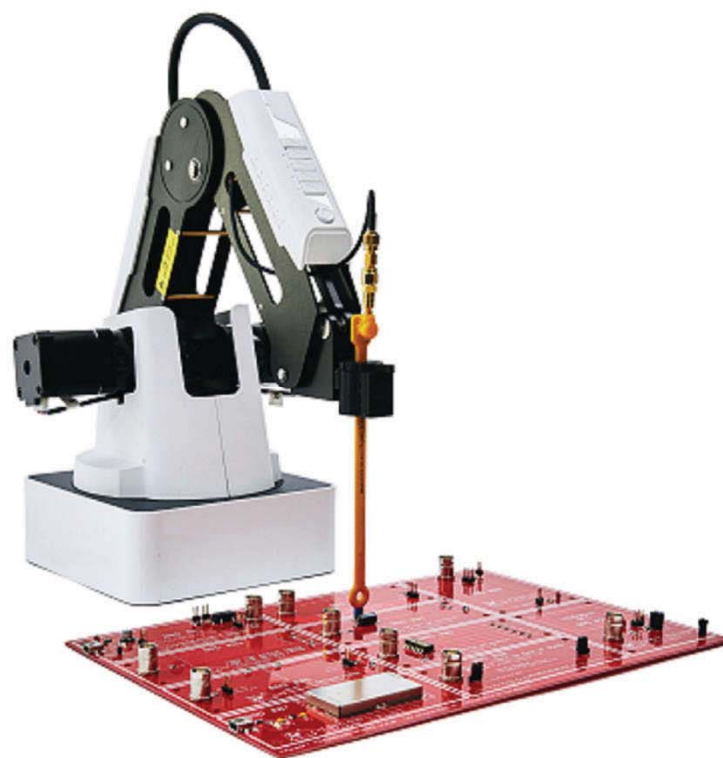


YIC
TECHNOLOGIES
Results in Realtime



Lambda

www.lambdaphoto.co.uk

T: +44 (0)1582 764334

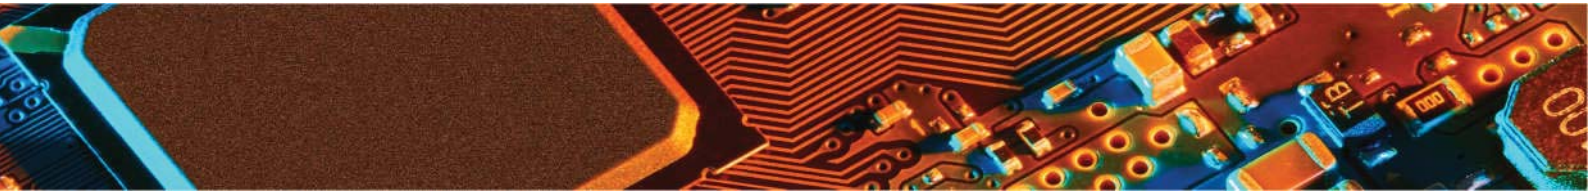

Disclaimer

Warranty

The material contained in this user manual is provided “as is” and is subject to being changed, without notice, in future editions. Further to the maximum extent permitted by applicable law, YIC Technologies disclaims all warranties, either expressed or implied, with regard to this user manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. YIC Technologies shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or any information contained herein. Should YIC Technologies and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Safety Notices






Caution

A CAUTION notice denotes a hazard. It calls attention to operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

Warning

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Components and Connection Overview

1	EMProbe	EMProbe Robotic Arm	
2	Adapter	The adapter provides the trigger to the Spectrum Analyzer	
3	RF SMA to type N coaxial cable	It is referred as the RF cable in this manual. It connects the probe to the spectrum analyser and has a SMA connector for the scanner and a N connector for the spectrum analyzer 50 ohm input port. It transmits RF output of the scanner to the spectrum analyser.	
4	USB Cable	It connects the PC (laptop or desktop) to the adaptor. The USB Cable provided with the system has ferrites on both ends of the cable	
5	BNC-SMB Trigger Cable	It connects the adaptor to the spectrum analyser	

Required Components (Supplied by user)

1. **Spectrum Analyzer:** It must include the necessary options to work with the EMProbe (see [Supported Spectrum Analysers](#)). It measures the radio frequency (RF) signal received from the scanner, generated by the very-near-field emissions of an adjacent activated PCB and it outputs the data to the PC.
2. **PC (Laptop / Desktop):** It must support a LAN 10/100 connection to the spectrum analyzer and a USB connection (version 2.0 or higher) to the adaptor or two USB connections, one for the spectrum analyzer and one for the adaptor. It runs the EMViewer software and receives data, which it can display and manipulate immediately or store for future data presentation.

Installation and Hardware Setup

1. Install latest version of Keysight IO


Click [here](#) to open the website to download the latest version. On the website click on the Download button and follow the steps.

2. Install the software application


Install the EMViewer software by clicking on the Setup application icon. The application must always be installed on the C: drive.

EMViewer software can be found at www.yictechnologies.com

3. Connect PC, scanner, adapter and spectrum analyser as per the diagram below. If you are using Ethernet between the PC and the spectrum analyser, use a crossover Ethernet cable. If the spectrum analyser has multiple trigger ports, always connect to Trigger 1 IN.

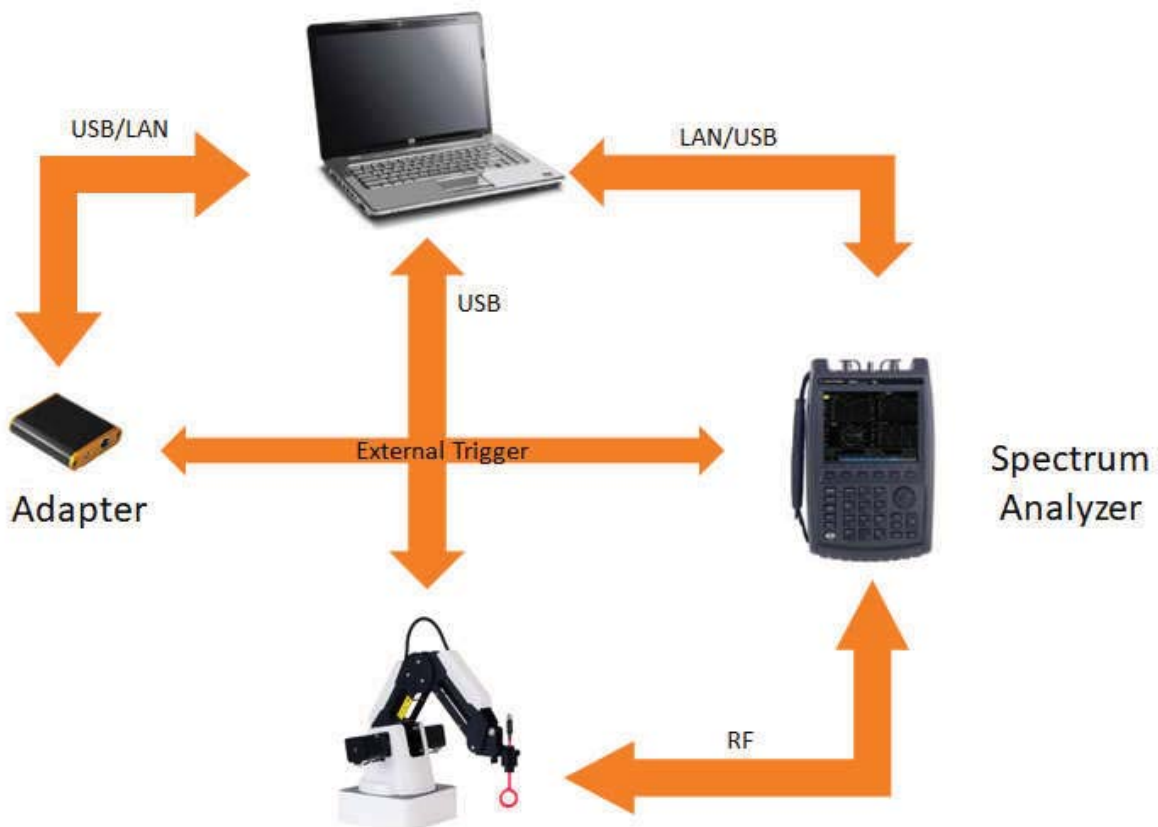

Connection Diagram

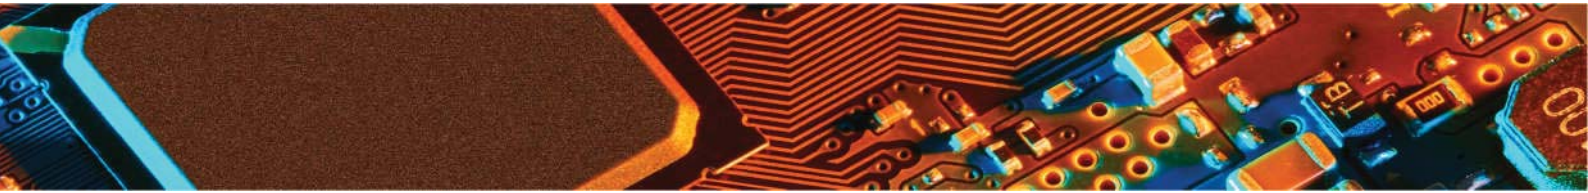



1. Connect the SMB connector to the Adapter and the BNC connector to the external trigger port on the rear panel of the spectrum analyser
2. Connect the B-end of the USB cable to the USB port on the Adapter and A-end to any USB port on the computer.



Adapter ports

1. SMB external trigger cable port
2. LED light shows three stages:
 - Red: Boot mode (this stage is fast; you may not even notice it)
 - Orange: Initiation mode (checking adaptor's firmware)
 - Green: User mode (adaptor is connected and ready)
3. USB connection port
4. Micro-D control cable connector - Adapter
5. Micro-D control cable connector - Scanner
6. RF output port

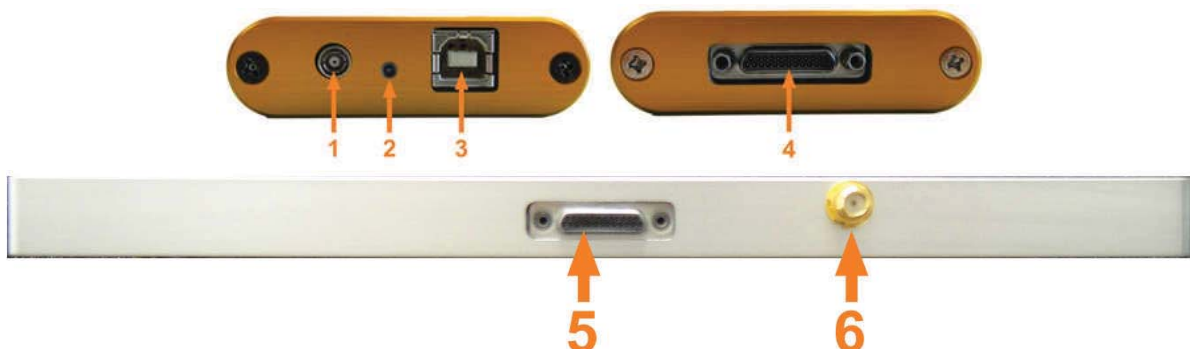

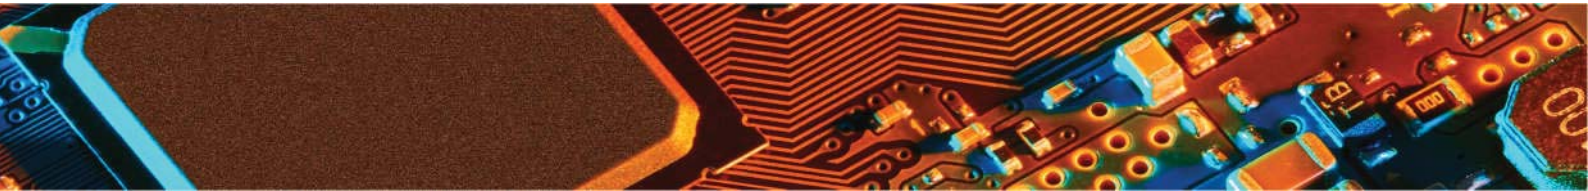

Optional EMScanner

To add EMScanner to set up simply connect the control cable to port5 4 & 5. Both tools will appear on the EMViewer preference tab and the user will be able to switch between them. Please note, the RF input to the Spectrum Analyser should be switched manually from the EMProbe to the EMScanner before making the scan.

Technical Support

To help us provide fast and seamless technical support, kindly gather the following information and contact Technical Support as instructed further below:

1. Serial number of your unit.
2. Software and firmware versions:
3. Windows OS information
4. Keysight IO version
5. Spectrum analyser model and firmware level
6. Information View data saved as a text file
7. Description of the problem including screen shots and videos

Distribution in the UK & Ireland



**Characterisation,
Measurement &
Analysis**

Lambda Photometrics Limited
Lambda House Batford Mill
Harpenden Herts AL5 5BZ
United Kingdom
E: info@lambdaphoto.co.uk
W: www.lambdaphoto.co.uk
T: +44 (0)1582 764334
F: +44 (0)1582 712084