




Model 125.Clean

Overview

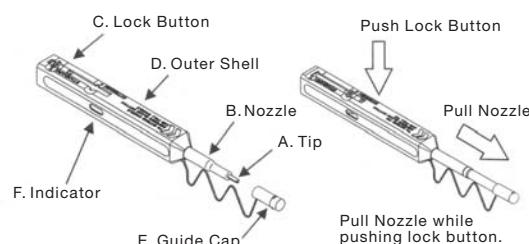

Standard Mode

Extended Mode

	View of Indicator	View of the Nozzle end
Full	Cloth (white)	Tip (black)
Little	Cloth (white) Red	Cloth (white) Tip (black)
Empty	Red	Tip (black) No Cloth (black)

Identification of remaining cloth

No.	Part Name	Function
A	Tip	Lead the cleaning cloth to the optical connector end face
B	Nozzle	Lead tip to the optical connector end face
C	Lock Button	Push the button to extend and contract the nozzle
D	Outer Shell	Push the outer shell to clean the connector
E	Guide Cap	Acts as dust cap or cleaning adaptor for connector plug
F	Indicator	Provides indication of remaining cleaning cloth

	Though our device is deemed safe, improper use or handling can still inflict injury to others.
	125.Clean is designed to clean LC connectors or connectors with 1.25mm ferrule (MU, LX2) only. OptoTest is not liable for damage caused in attempt to apply this device to other applications.

Notes on usage and storage

Do not attempt to disassemble as this can cause damage to the device.
Do not re-use cleaning cloth as this will eliminate its cleaning ability.
Do not touch the cleaning cloth as this will cause contamination.
Do not pull the cleaning cloth, use only the device body.
Do not use this cleaner when the cloth is empty, as this can cause damage to the connector.
Do not expose device to direct sunlight, high temperature or high humidity.
The cover on the guide cap should be closed at all times when the device is not in use.

Distribution in the UK & Ireland




Lambda Photometrics Limited
Lambda House Batford Mill
Harpenden Herts AL5 5BZ
United Kingdom
E: info@lambdaphoto.co.uk
W: www.lambdaphoto.co.uk
T: +44 (0)1582 764334
F: +44 (0)1582 712084


**Characterisation,
Measurement &
Analysis**

<Connector inside adaptor>

1. Remove Guide Cap from the device.

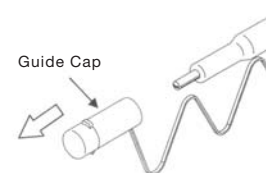

2. Insert tip of cleaner into LC Adaptor.

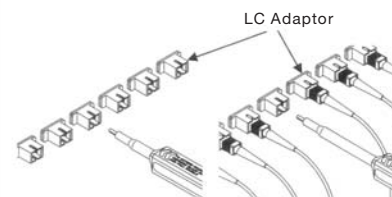


Standard Mode

Extended Mode

Note: This drawing shows only SC, but this product can clean ST and FC too.

3. Push the Outer Shell to start cleaning the LC connector end face. A "click" sound indicates end of cleaning process. Close the cover after use.

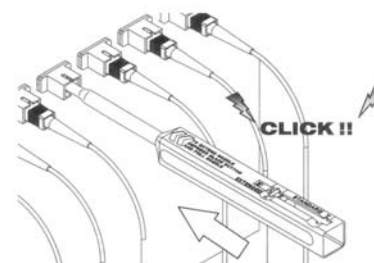


Be careful not to slant the 125.Clean while inserting into the adaptor.

Do not overly exert force during insertion as this may cause damage to both the connector and the 125.Clean.


If pushing Outer Shell is inhibited, remove 125.Clean adaptor and ensure that there is no sizeable debris inhibiting the cleaning process.

<Connector plugs alone>

1. Open the Cover on the Guide Cap.

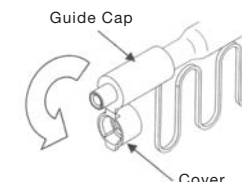


2. Insert LC connector into the Guide Cap.

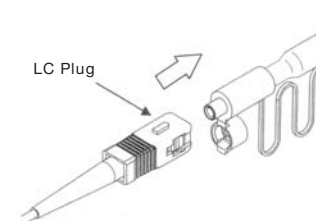

Note: This drawing shows only SC, but this product can clean ST and FC too.

3. Push the Outer Shell to start cleaning the LC connector end face. A "click" sound indicates end of cleaning process. Close the cover after use.

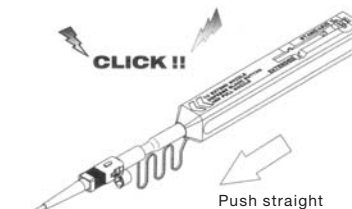

Be careful not to slant the LC connector while inserting into the Guide Cap.

Do not overly exert force during insertion as this may cause damage to both the connector and the 125.Clean.

If pushing Outer Shell is inhibited, remove 125.Clean adaptor and ensure that there is no sizeable debris inhibiting the cleaning process.